 


# PLEASE READ THIS BEFORE ATTEMPTING TO REMOVE THE SHADE FROM THIS BOX:

## 110 TOUCH HEAD ASSEMBLY


1. Lift **HEAD ASSEMBLY** off the top of the **LAMP POLE**. (*Do Not Disconnect the Wires or Connectors.*)
2. Lift **SHADE** up and past the **HEAD** through the top frame of the **SHADE**. (*Leave the HEAD connected to the wires.*)
3. Replace the **HEAD** onto the **LAMP POLE** and using a small Phillips screwdriver tighten the **RETAINING SCREW**.

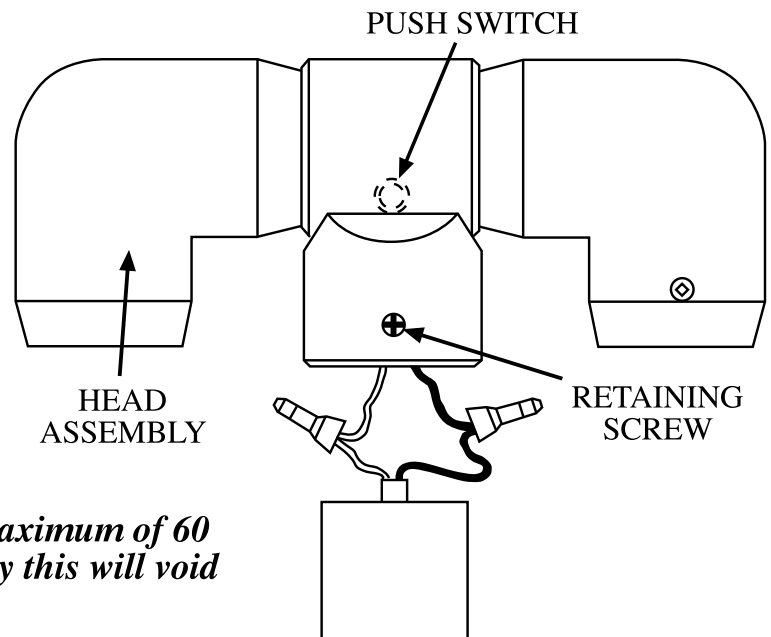

**\*CAUTION:** To reduce the risk of fire, a maximum of 60 Watt bulbs must be used. Failure to abide by this will void any warranty of this lamp.

## REPLACEMENT HEAD ASSEMBLY (Does Not Apply to New Lamps)

 1. Attach the wire on the **LAMP POLE** to the **WIRE CONNECTORS** at the bottom of the **HEAD ASSEMBLY** by compressing the end of the **WIRE CONNECTOR**, inserting the wire as far as it will go and releasing the **WIRE CONNECTOR**. (*Be sure that the wires are connected WHITE TO WHITE and BLACK TO BLACK and that no bare wire is exposed.*)
2. Slide the **HEAD ASSEMBLY** over the **LAMP POLE** and tighten the **HEAD ASSEMBLY RETAINING SCREW**.

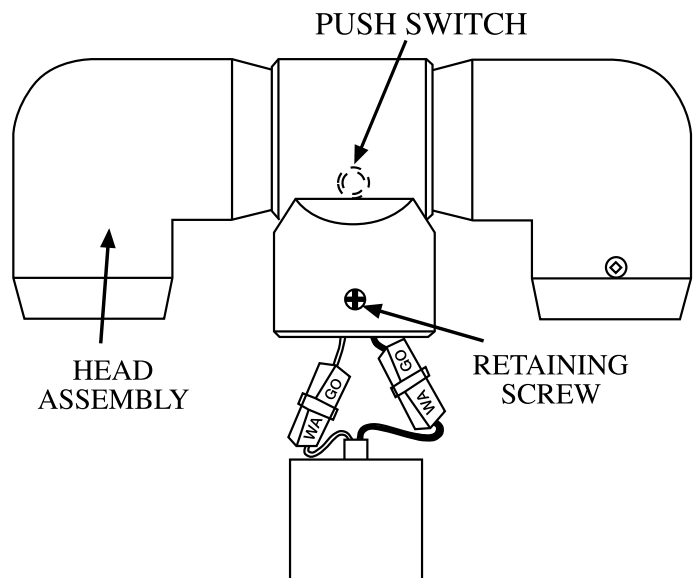

**Outdoor Lamp  
Company Inc.**  
12429 Denton Avenue  
Hudson, FL 34667



**Phone: 727-848-1134**  
**Fax: 800-535-3411**  
E-mail: [info@outdoorlampcompany.com](mailto:info@outdoorlampcompany.com)  
Website: [www.outdoorlampcompany.com](http://www.outdoorlampcompany.com)