

PORTABLE OUTDOOR SHOWER
**Shower
 POWER**
 WITH FOOT WASHER

MODEL 30-1F

ASSEMBLY

TOOLS REQUIRED:

PHILLIPS SCREWDRIVER

FILL BASE (Not Weighted Models):

To provide stability, the Base should be filled with water or sand.

Fill as follows:

Invert Base, fill with water or sand, and insert Base Plug. Base is now ready for assembly.

ASSEMBLY:


- Screw the threaded Hose Connector into the Threaded Fitting on the bottom portion of the Lower Stem.
- Insert the Lower Stem into the Base.

GLUING TIPS:

Using the Gluing Applicator - Apply a liberal amount of Glue to the inner surface of the part being joined together. Then run the Applicator around the outer end of the part being inserted. **BE CAREFUL TO APPLY THIS GLUE, SO IT DOES NOT RUN.**

YOUR SHOWER INCLUDES A FOOT WASHER

- After applying Glue to both surfaces (*See Gluing Tips above*), Slide the Foot Washer Assembly over the Lower Stem, being certain to face the Valve to the opposite side of the Hose Connector or to the front side of the unit.
- After applying Glue to both surfaces (*See Gluing Tips above*), Insert the Upper Stem into the Lower Stem (approximately 1-1/4 inches).
- After applying Glue to both surfaces (*See Gluing Tips above*), insert the Shut Off Valve into the Upper Stem, being certain to face the Shut Off Valve to the front of the unit.
- Screw the Shower Head onto the Threaded End of the Shower Curve.
- Loosen the Screw in the Shut Off Valve and insert the Shower Curve into the Valve with the Shower Head facing the front of the unit and retighten the Screw (may also be glued, but it is not necessary).

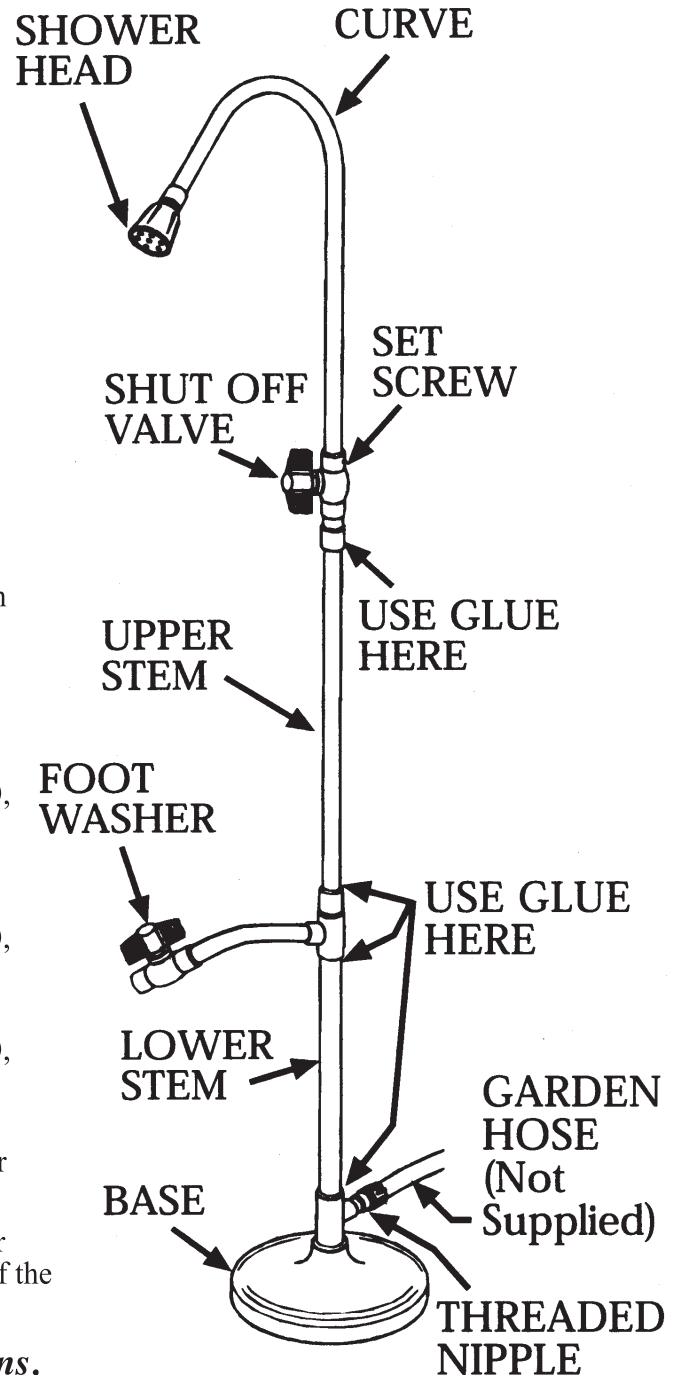

*If you have any questions,
 Call Frank at 727-858-0816.*



**Outdoor Lamp
 Company Inc.**
 12429 Denton Avenue
 Hudson, FL 34667



**Phone: 727-848-1134
 Fax: 800-535-3411**

**E-mail: info@outdoorlampcompany.com
 Website: www.outdoorlampcompany.com**